


 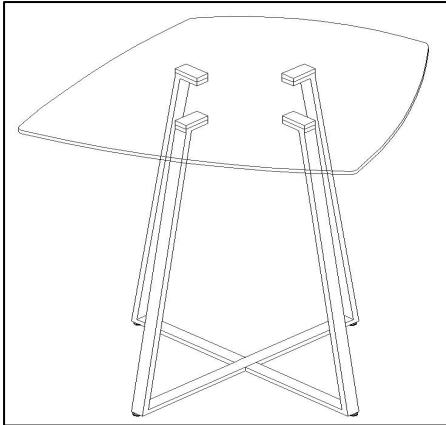








ASSEMBLY INSTRUCTION

<<Before assembling, read all the instruction>>


ITEM#2401690

Components:



| | | | | |
|--|--|--|--|--|
| A  | B  | C  | D  | E  |
| 1PC | 1PC | 2PCS | 1PC | 4PCS |
| F  | G  | H  | I  | |
| 6PCS | 8PCS | 8PCS | 1PC | |

Step 1

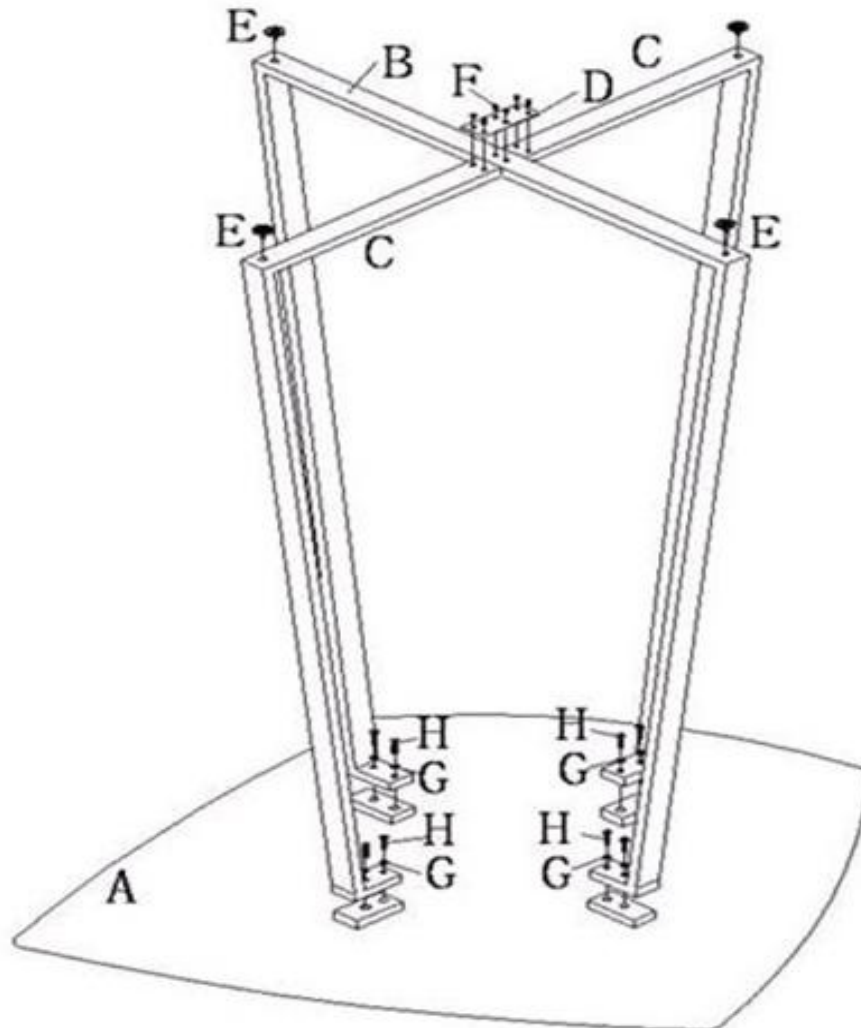

In the unlikely event of missing parts please contact spareparts@premierhousewares.co.uk. Detailing: when and where purchased, stockcode, detail of missing piece(s), full name and address.



4PCS



