 
 
 


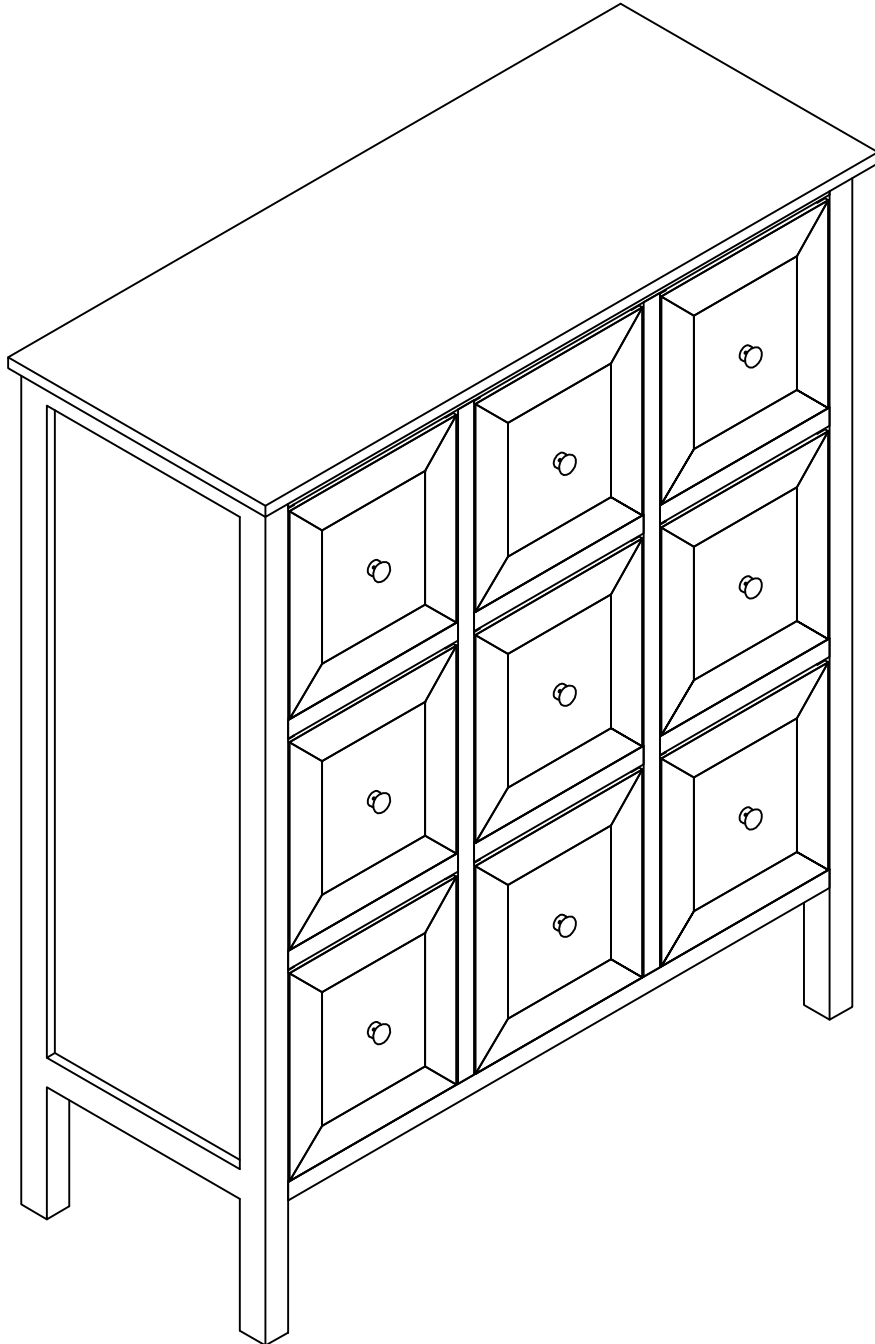

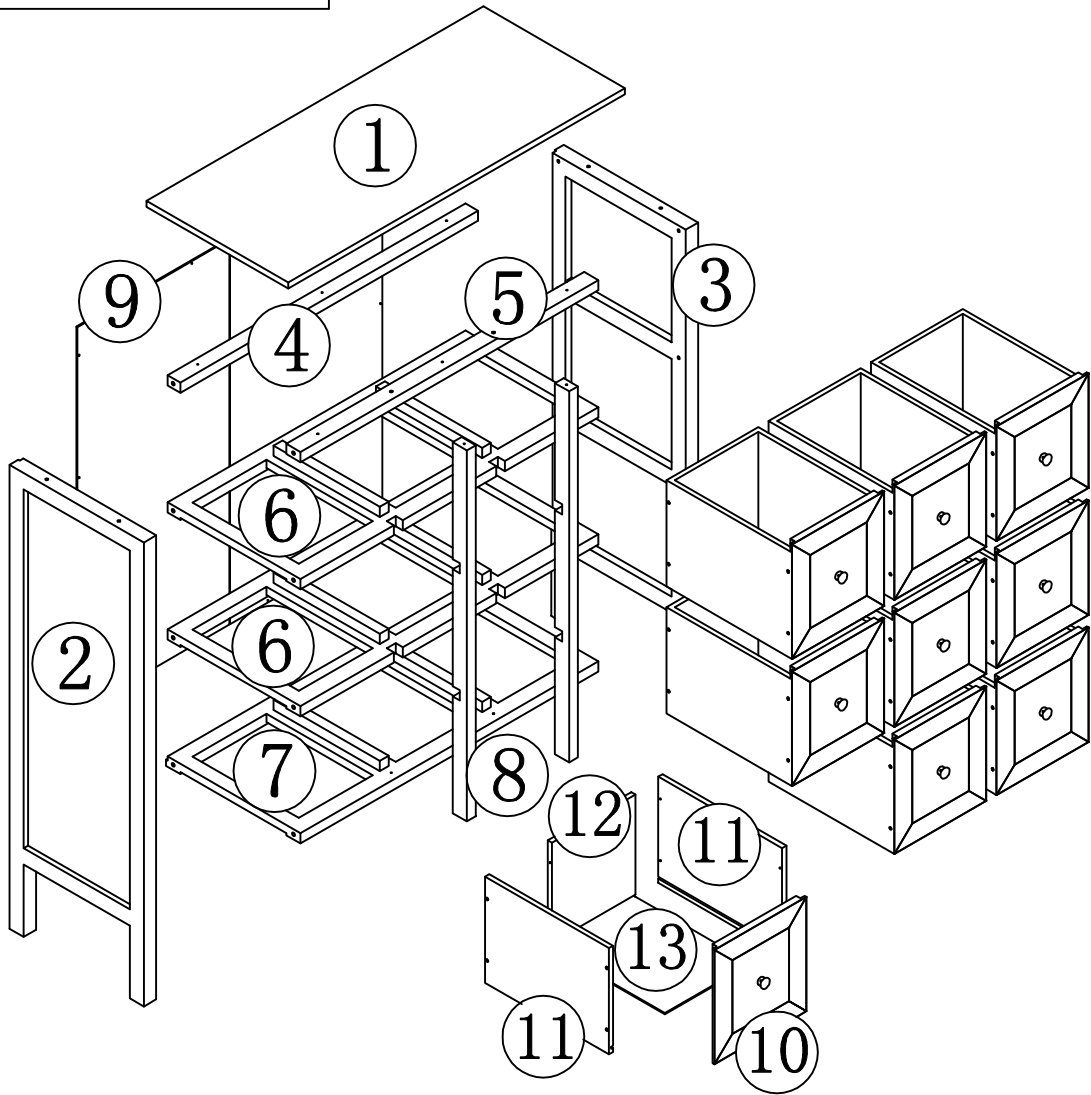

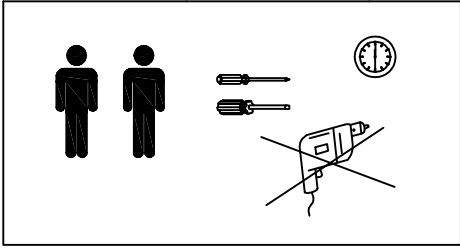


**2403131/2403141**

 
 
**ASSEMBLY INSTRUCTION**  
<<Before assembling, read all the instruction>>







<p>Ax72</p> 	<p>Bx16</p> 	<p>Cx16</p> 	<p>Dx4</p> 	<p>Ex15</p> 	<p>Fx9</p> 
<p>Gx16</p> 					



1

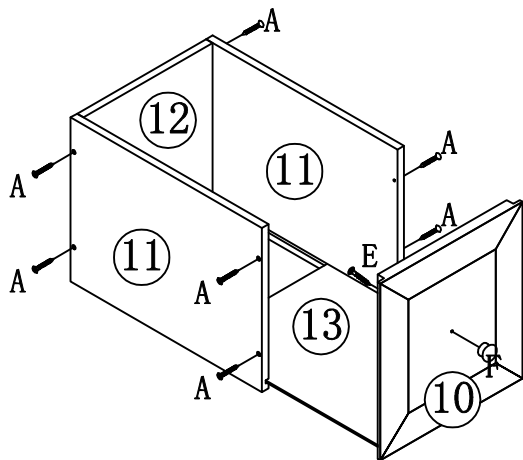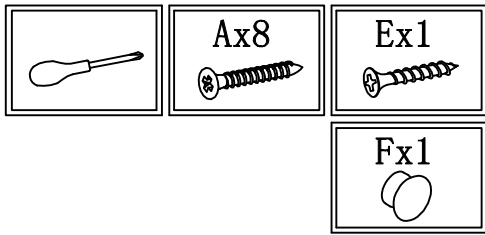



2

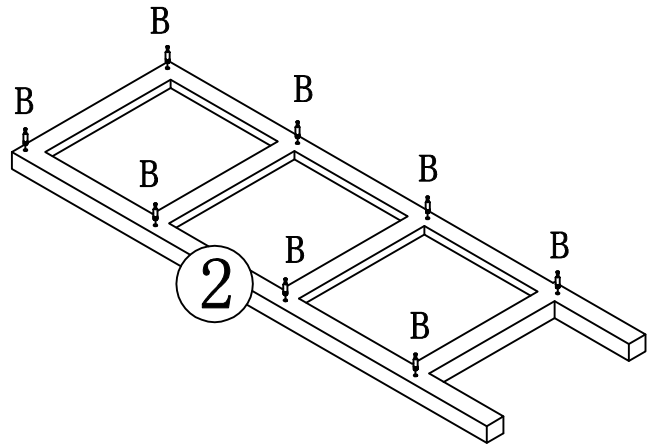  




3

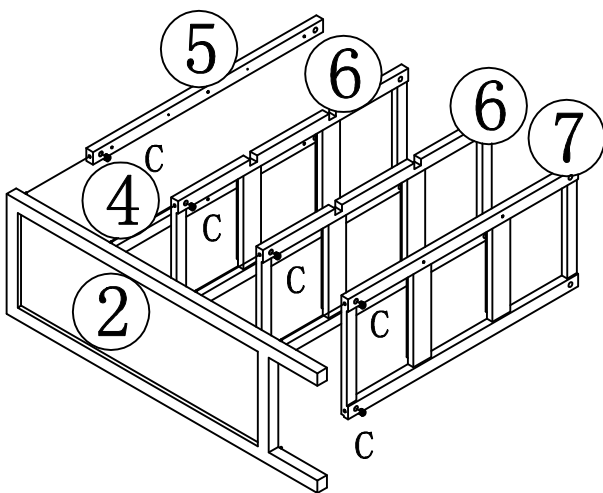  





4

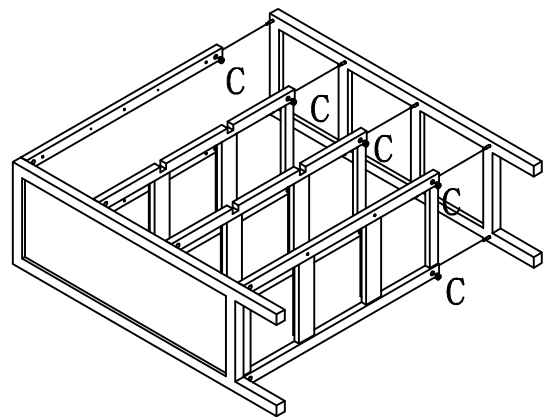  



5

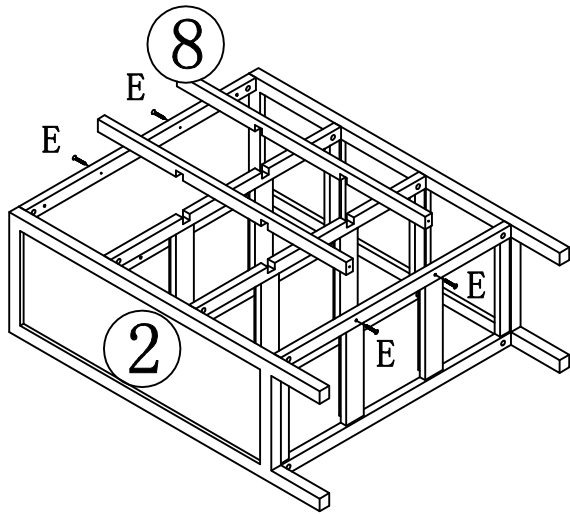   


6

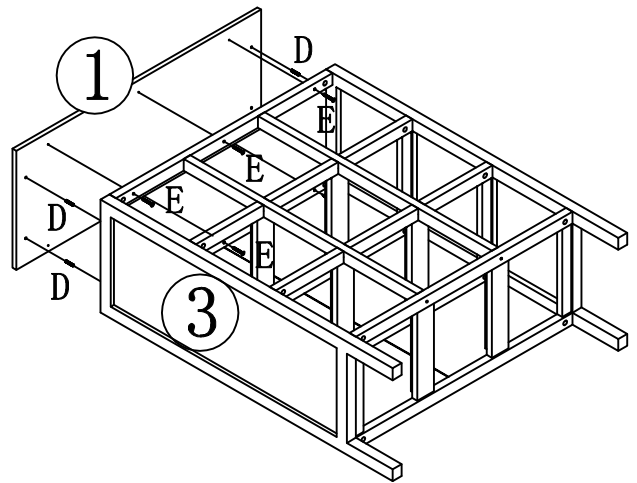    

7

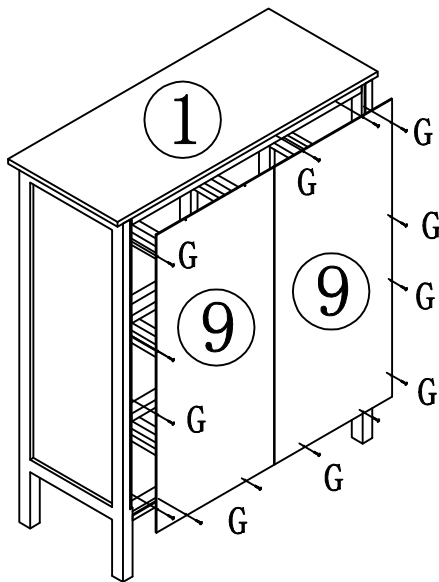  

8

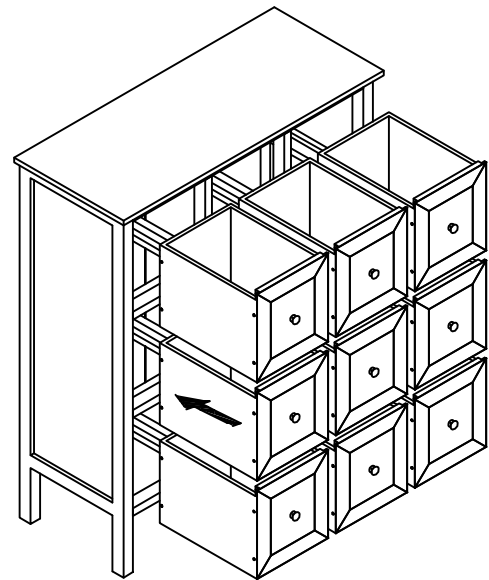 

## ATTENTION: KEEP OUT OF DIRECT SUNLIGHT

In the unlikely event of missing parts please contact [spareparts@premierhousewares.co.uk](mailto:spareparts@premierhousewares.co.uk). Detailing : when and where purchased, stockcode, detail of missing piece(s), full name and address.