 
 
 


2403416
ASSEMBLY INSTRUCTION
 «Before assembling, read all the instruction»

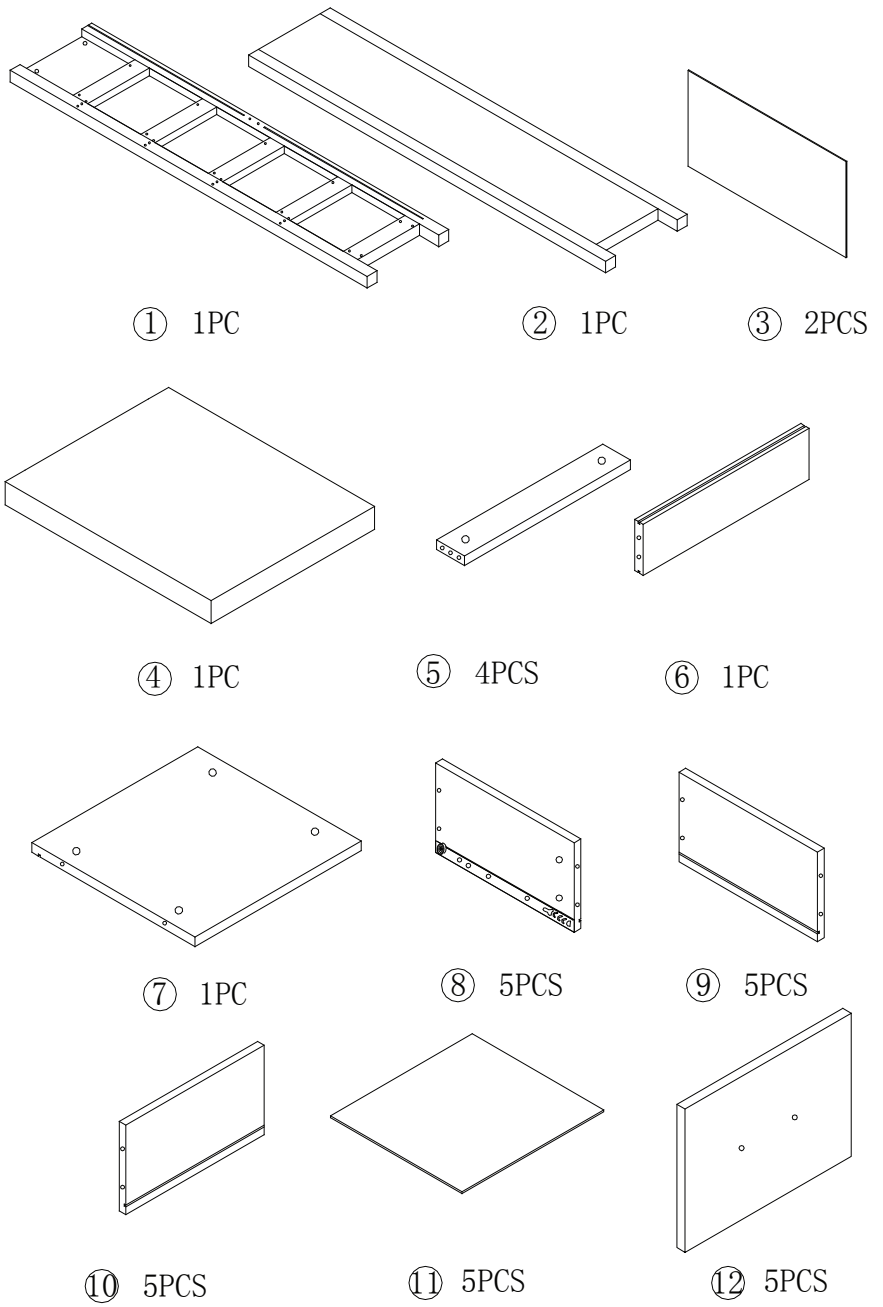

A 40PCS

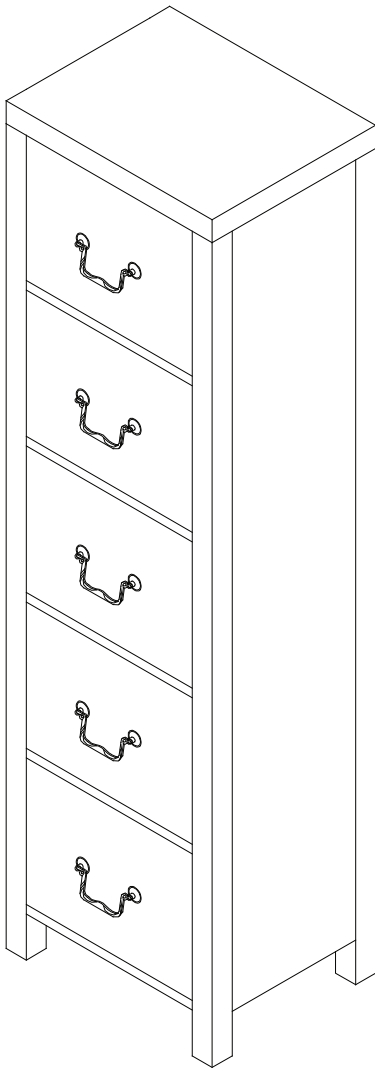

 
B 40PCS




C 16PCS




D 40PCS




E 5PCS

 

F 5PCS

 

G 5PCS

 


H 5PCS



I 21PCS



 J 10PCS

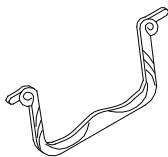

K 5PCS



L 1PC



M 1PC

 


N 1PC




O 10PCS


1

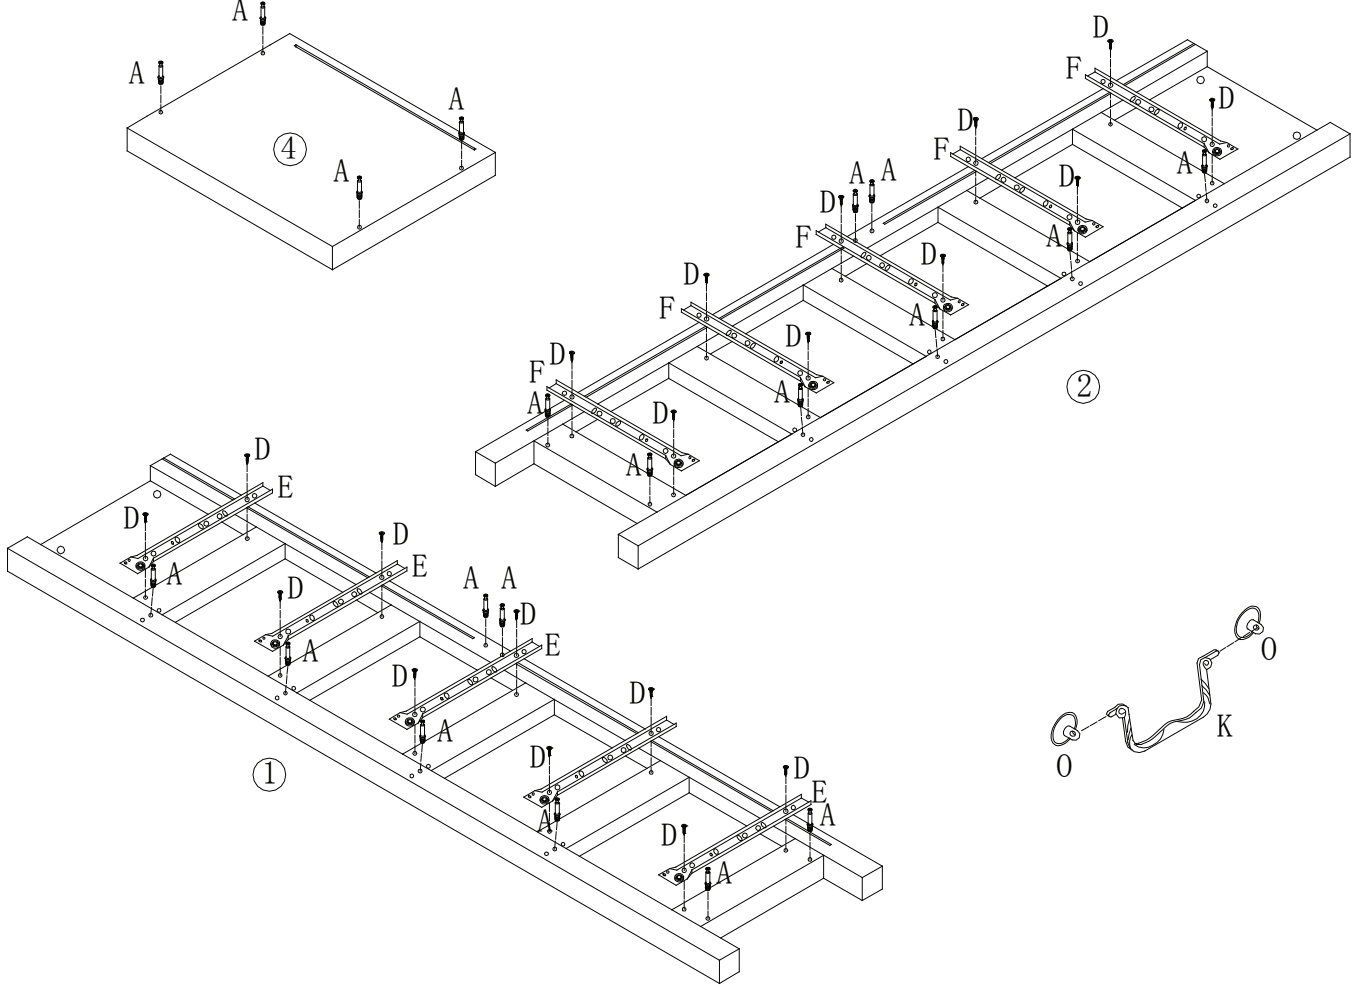


2

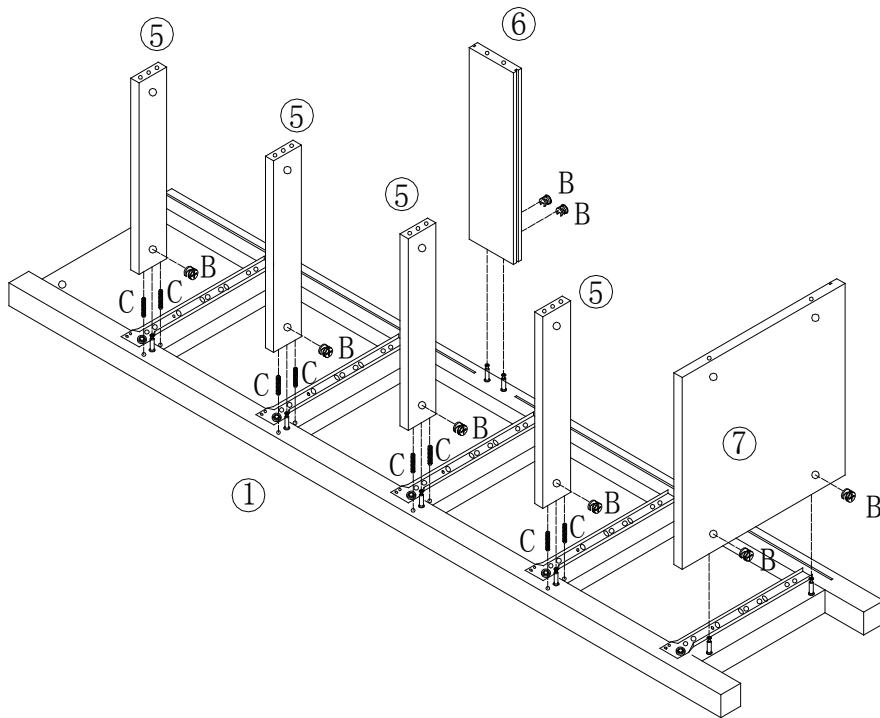 


3

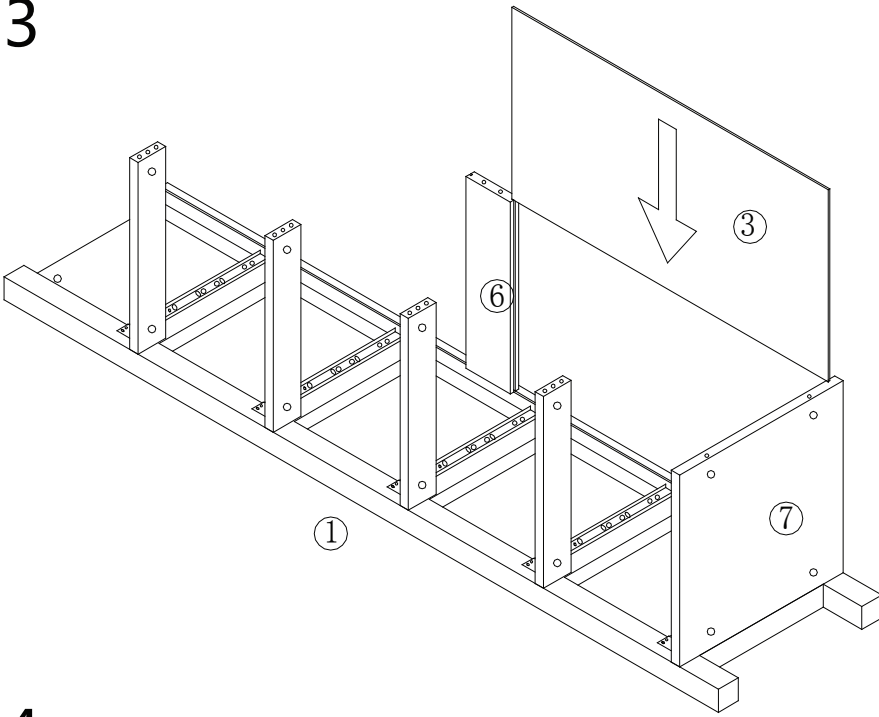 


5

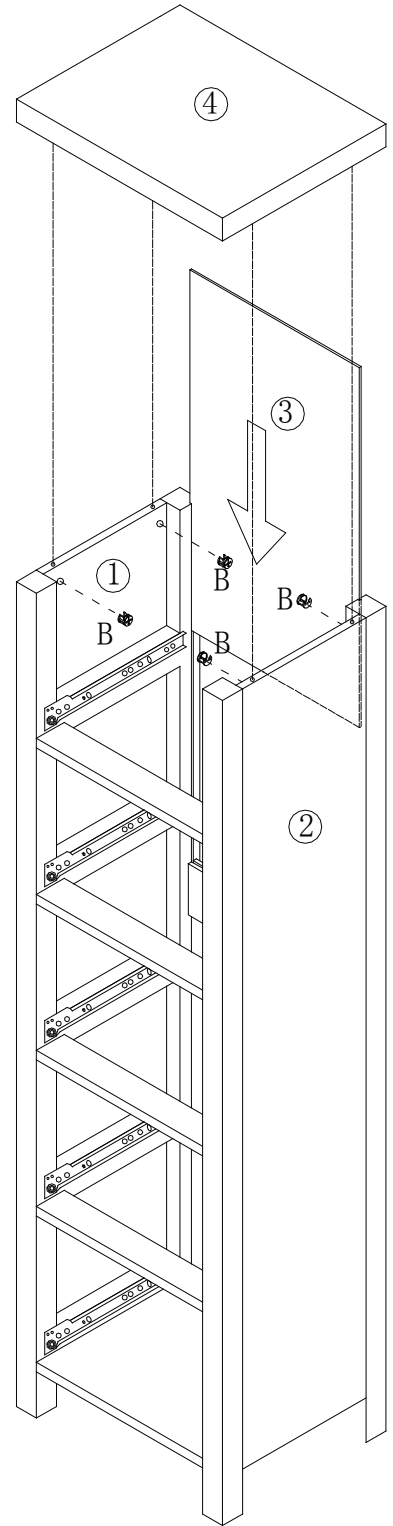 


4

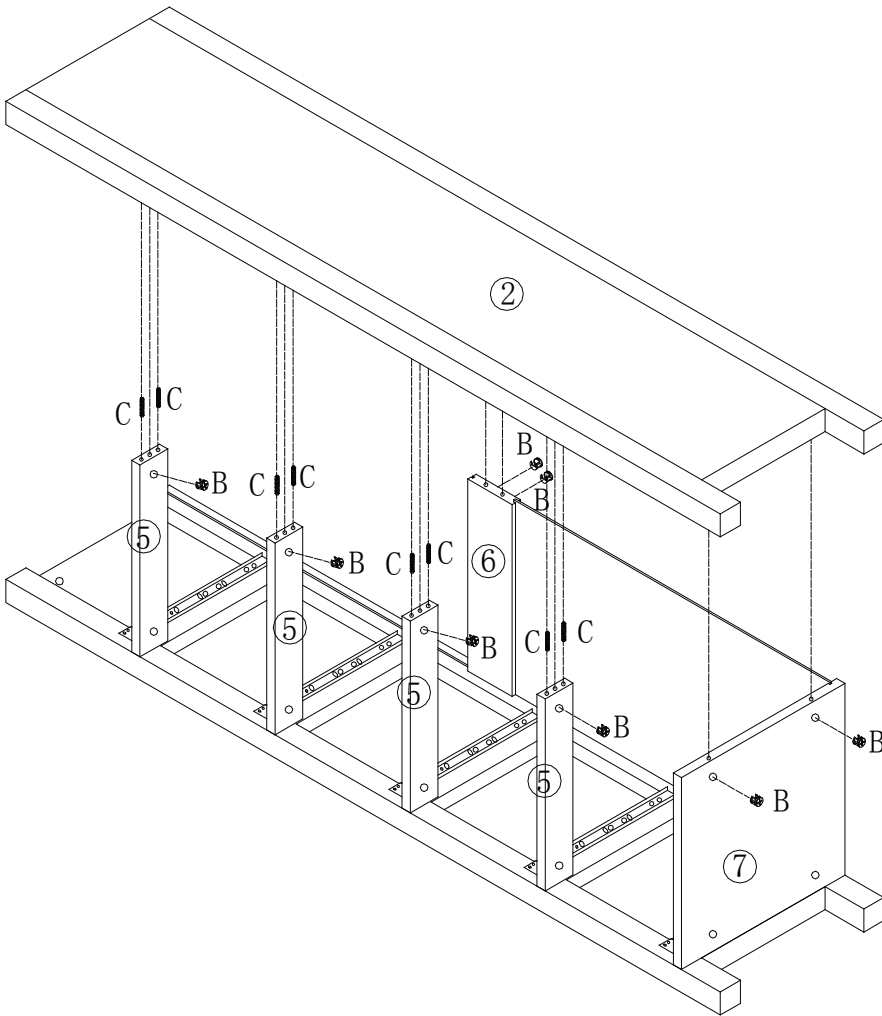 


6

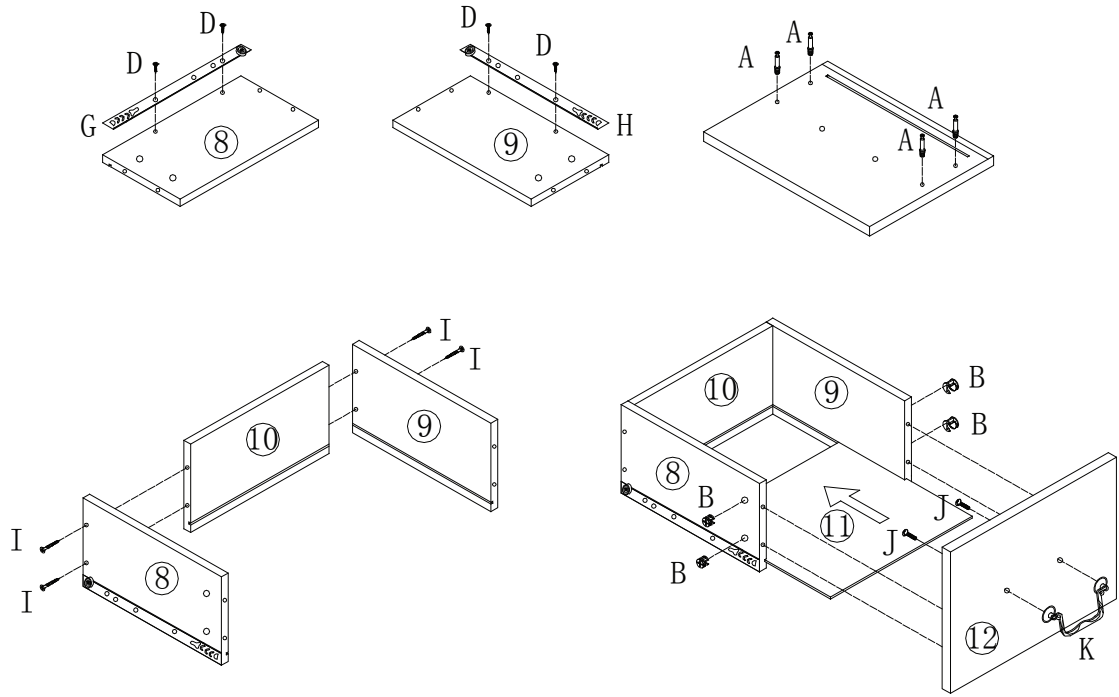 

7

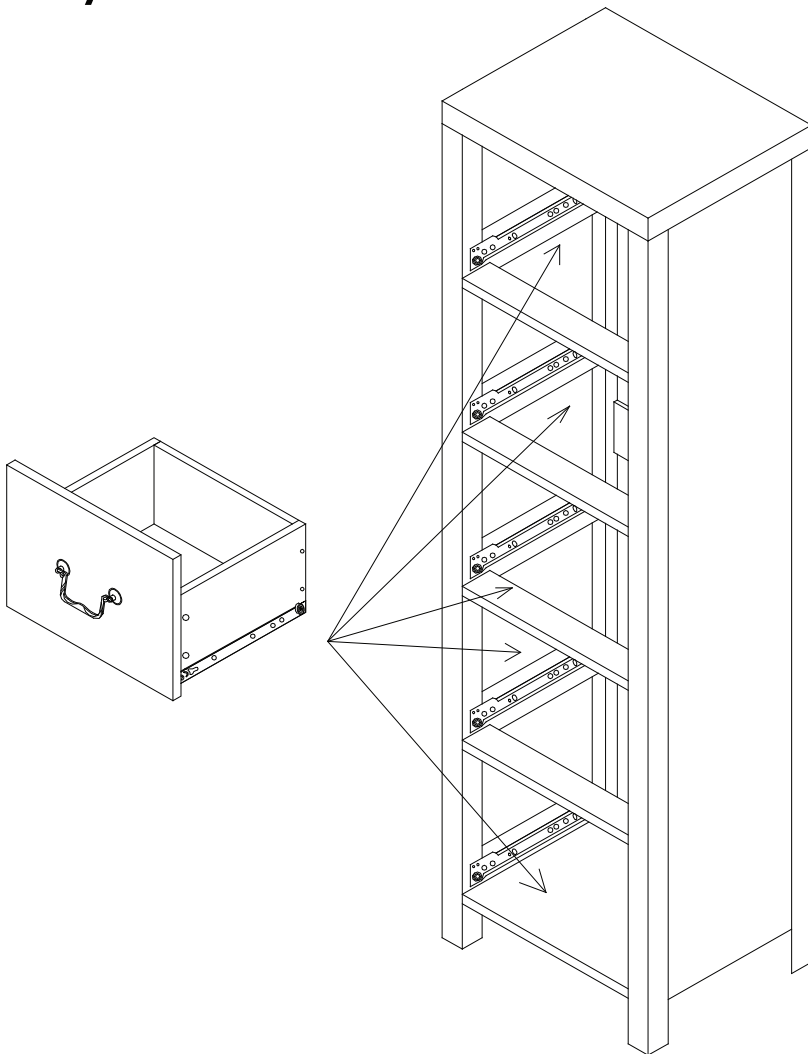 

8

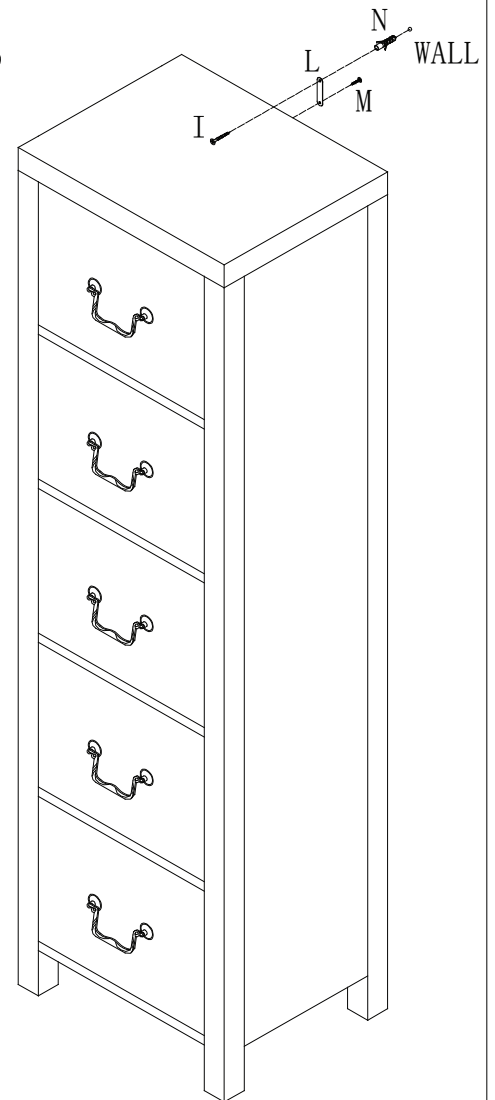 

ATTENTION: KEEP OUT OF DIRECT SUNLIGHT

In the unlikely event of missing parts please contact spareparts@premierhousewares.co.uk. Detailing: when and where purchased, stockcode, detail of missing piece(s), full name and address.