

2404317

ASSEMBLY INSTRUCTION

<<Before assembling,read all the instrution>>

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

②*12 ③*8 A B*2 ①*5 C*2 ②*2 ③*4 ①*3 ②*12 ③*8 ①*3 ②*2 ③*4 E*4 ①*2 F*2 ①*2 G*2

C C A B B D E E F G G A B C A B C D E F G A B C D E F G

A 1PC B 2PCS C 2PCS D 1PC E 4PCS F 2PCS G 2PCS

④*8 ④ ④

①	36PCS	②	36PCS	③	40PCS	④	8PCS
---	-------	---	-------	---	-------	---	------

ATTENTION:KEEP OUT OF DIRECT SUNLIGHT

In the unlikely event of missing parts please contact spareparts@premierhousewares.co.uk.

Detailing:when and where purchased,stockcode,detail of missing piece(s),full name and address.